

1. Protecting cap
2. Stainless steel cutting system
3. Cutting head
4. BIPIN-lamp
5. ON/OFF switch
6. Battery cover

### **Instructions for use for the washable nasal and ear hair trimmer.**

1. Protecting cap
2. Stainless steel cutting system
3. Cutting head.
4. BIPIN-lamp:
5. OWOFF switch
6. Battery cover

### **IMPORTANT SAFETY INSTRUCTIONS**

When using a battery operated appliance, basic safety precautions should always be followed, including the following. Read all instructions before using the product.

When using a battery operated appliance, basic safety precautions should always be followed, including the following. Read all instructions before using the product.

### **SAFETY**


Your trimmer is an electrical device, please pay attention to the following safety instructions:

- Only use the trimmer as described in this manual
- Ensure tight seat of the cutting head(3).
- Not suitable for children and keep out of reach of children.
- This is a washable product. It can be cleaned easily and safely under running water. However.
- Do not immerse the trimmer in water.
- Check the trimmer for mechanical damaged. A damaged cutter may result in injury.

- The equipment meets the requirements of the EU guideline on Electromagnetic Compatibility (EMC) 89/336/EEC.

### **Battery installation / replacement**

Holding the trimmer upside down. Rotate the battery cover counterclockwise until the cover unlocks from the unit.

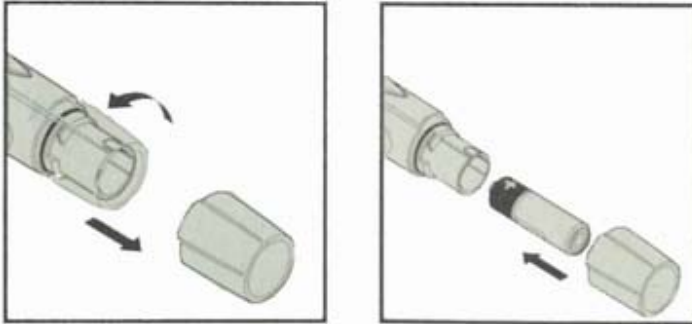

Insert one AA alkaline battery compartment, positive side up. Replace the battery cover and turn clockwise to snap into place. To avoid pulling of hairs, replace battery when it begins to get weak.

**! Do not dispose of used batteries with household rubbish. Take used batteries to a convenient collection point.**

### **Trimming operation**

Remove the protecting cap by pulling it from the unit. Switch the trimmer on.

### **Trimming nose hair**



Make sure nasal passages are clean. Slowly move the cutting head in and out, of each nostril to remove unwanted hair.

**Caution: Do not insert tip more than 0.5 cm into nostril. For best results, make sure the side of the tip is firm against skin. This will reduce the tickling effect that can occur.**

### Trimming ear hair



Clean outer area of ear and make sure it is free of wax. Pull ear flat to head with one hand and hold trimmer with the other. Turn trimmer on and move tip around edges of ear to remove hairs extending beyond the outer ear. Then carefully insert tip into outer ear no more than 0.5 cm.


**Caution- To avoid injury do not put any part of trimmer into inner ear. Do not insert the trimmer further than 0.5cm into the ear as this could cause damage to the eardrum.**

### Trimming eyebrows



Turn trimmer on and use tip to cut straight eyebrow hair. To shape and trim eyebrow, hold trimmer at even distance from your head and move across the eyebrow.

### Cleaning of the trimmer

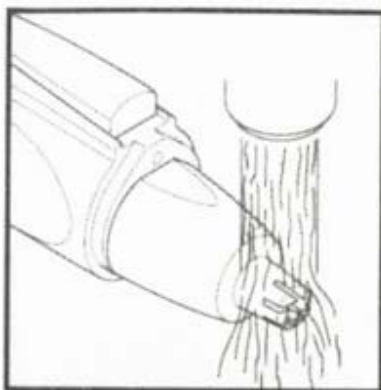

If necessary the trimmer may be cleaned under running water. Turn the trimmer "off" and rinse the cutting head under warm water.

For more thorough cleaning, remove cutting head assembly (unscrew in clockwise direction) and rinse under running water to remove hairs from inside of assembly.



After cleaning, return cutting head assembly to its original position (turn counter-clockwise) and wipe entire trimmer dry with soft cloth. Always replace protecting cap before storing the trimmer.

**! IMPORTANT: DO NOT immerse or submerge Trimmer.**